

Lec

Lec TU60175W/S/A

User Manual

LEC Customer Care

please keep this handbook in a safe place.

Please fill in the model number and serial number in the spaces provided below as they will assist us should you need to call.

0844 815 3737

When you dial this number you will hear a recorded message and be given a number of options. This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care Representatives become available.

Enter appliance numbers here for future reference:

Model No	<input type="text"/>								
Serial No	<input type="text"/>								

These numbers can be found on your appliances.
Outside the UK and Northern Ireland, refer to your local supplier.

Lec

Stoney Lane, Prescot, Merseyside, L35 2XW



1

2

3

4

5


6

Congratulations


Thanks you for purchasing single door upright freezer TU60175W/S/A. This product has been designed by our engineering team following the r quality requirement at each development step.

For a better use of your new device, we recommend you to read carefully this user manual and keep it for record.


Unpacking

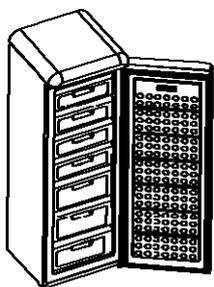


X 1

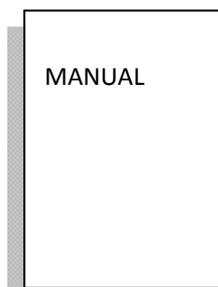


X 1

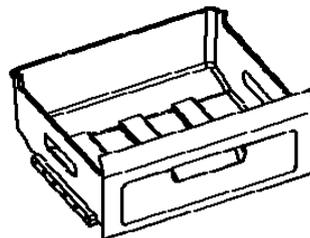


X 3

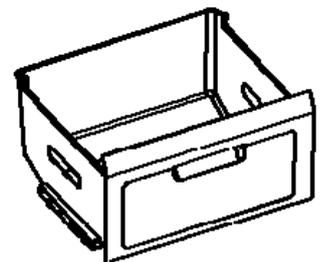

X 2

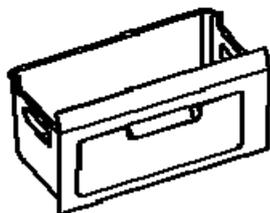

X 1

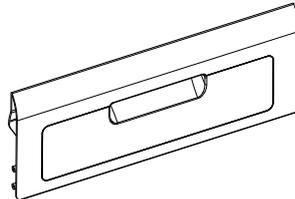

X1

Presentation of your new freezer

1 – Thermostat knob

2 – Flap

3 – Middle drawer

4– Big drawer

5– Lower drawer

6 – Adjustable feet

Safety warnings and precautions

IMPORTANT SAFETY INSTRUCTIONS: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Important warning:

- DO NOT REMOVE GROUND PRONG
- DO NOT USE AN ADAPTOR
- DO NOT USE WITH AN EXTENSION CORD
- Failure to follow these instructions can result in death, fire or electrical shock.
- Before you move your freezer into its final location, it is important to make sure you have the proper electrical connection.

Gas warning:



Caution: risk of fire!

- Due to the flammable refrigerant (R600a) and/or the flammable insulation blowing gas used, this gas is natural gas with high environmental compatibility that is, however, also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- Refrigerant and/or insulation blowing gas squirting/leaking out of the pipes or body of appliance could ignite or cause an eye injury. If leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.
- Servicing and repair of R600a refrigerant shall be done by qualified service technicians.
- Do not damage the refrigerant circuit.

Storage warning:

- Do not store or use gasoline, ether, benzene, LP gas, and glue or any other flammable vapors and liquids in the vicinity. Failure to do so can result in death, explosion, fire or burns.
- Do not store bottled drink in the freezer to prevent from being broken and damaging the freezer.
- Do not place heavy, pointed or corrosion objects in the compartment.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Child warning:

- Risk of child entrapment. To avoid possibility of child entrapment, please take the following precautions before recycling :
 - a. Remove the door from the unit
 - b. Leave the shelves in place so that children may not easily climb inside.
- Children should be supervised to ensure that they do not play with the appliance.

Cleaning warning:

- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- Never clean freezer parts with flammable fluids. The fumes can create a fire hazard or explosion.
- When defrosting, never use any sharp or metallic objects to remove the frost on the surface of the evaporator as it will damage the evaporator.
- Do not splash water on the freezer; it may cause malfunction and electric shock.

Use warning:


- Do not pull on the connection cord, but rather on the plug, to separate the appliance from the mains.
- Do not touch food or containers in the freezing compartment with your wet hands so as to prevent from being frostbitten.
- Bulb is hot when lighting, do not attempt to touch.
- Do not touch the compressor as the surface may become hot.
- Before plugged in, check in the electric voltage to be used fit is the same as the rated voltage. The power plug should have its independent socket.
- A 220-240V~ 50Hz 10A fused and properly earthed electrical supply is required.
- It is recommended to use a separate circuit or separate receptacle for the freezer.
- This appliance is not intended for use by person (including children) with reduced physical, sensory, mental capabilities, or lack of experience and knowledge, unless they have been give supervision to ensure that they do not play with the appliance.

Quick start guide

Install your freezer

Warning:


- Use two or more people to move freezer. Failure to do so can result in back or other injury
- This appliance is designed for domestic use only. Do not use outdoor.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Stand the appliance on a stable or flat surface.
- When moving the freezer, do not tilt the freezer beyond 45° from upright position
- Never install your freezer near heat source or direct sunlight

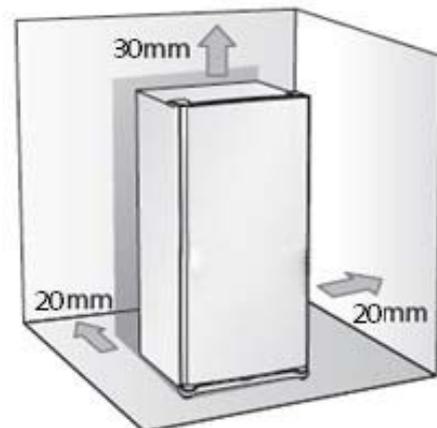


Install the freezer in a ventilated location and respect the minimum space distance

Level your freezer

If the freezer is not correctly level during installation, the doors may not well close or seal properly which will cause cooling, frost or moisture problems.

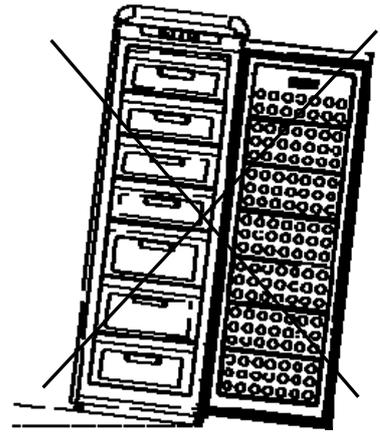

Turn the right and / or left adjustable legs to level the freezer horizontally

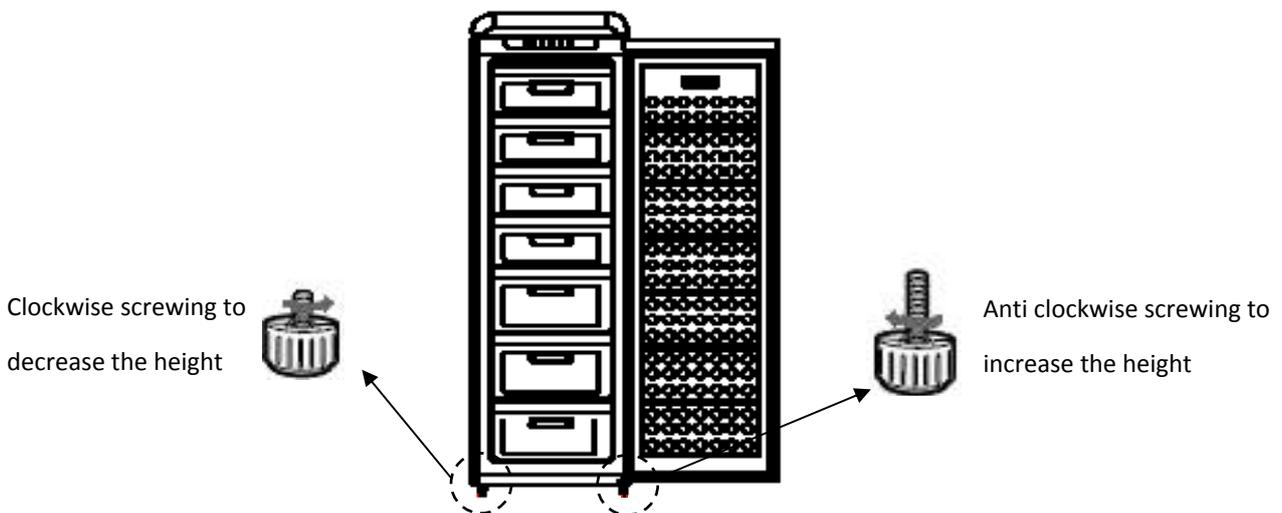

Use your freezer


Important:

When operating the freezer for the first time, set the thermostat to 1 without loading any food and let it operated during 3 hours.

The position of the thermostat depends of the room ambient temperature and also about the quantity of food stores in the freezer. For more details please read carefully the chapter "Storage advices"

Plug it to a socket outlet

Setting the temperature using the knob located inside the freezer compartment: MIN for less cold to MAX for colder

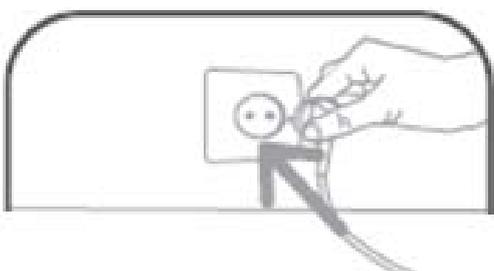

Food storage advices

General advices

Before placing food items in the freezer, wrap them carefully. This prevents food odor and taste transfer throughout freezer.

Also let enough space at the front so the door can close tightly.

Keep the seal clean and soft in order to don't lose cold air.

If there is some power interruption, please don't open the doors in order to keep inside the cold air.

Frozen food storage

The freezer compartment is designed for storing frozen food and for freezing food at home.

After defrost, never freeze another time the food.

Put in adapted protective bag or container all foods.

We advise you to split the food in small quantity.

Energy savings

By removing carton and package before putting food in the freezer, you reduce the power consumption because freezer cools down quickly the food.

By overfilling your appliances, you push the compressor to work during a long time: so you increase your power consumption.

Never put warm food in the freezer: let it be cool down until the room temperature before storing.

When you defrost some frozen food, put it in the freezer: the defrosting energy is used to cool down other food instead of use compressor power.

Keep the seal clean and soft in order to don't lose cold air.

Keep the door close and open the freezer only when necessary. Remember that each time you open the door, the cold air is lost and you overwork the compressor.

For best performance, leave enough space in the freezer for air to circulate around the packages.

Maintenance and cleaning

Defrost


Important:

Do not use knives or metal objects to defrost

To defrost partially the freezer compartment, you can remove the frost with a scraper (**provided with the appliance**).

If the frost thickness is more than 10 mm, you need to do a fully defrost. Please follow the below process to do it:

1. Remove all foods, ice cube tray and shelf of the freezer and freezer compartment (store them in other cold place)
2. Turn the thermostat knob to **OFF** and leave the freezer door opened.
3. Clean and wipe out the melted frost with a cloth.
4. After defrosting, turn the thermostat knob to origin position.

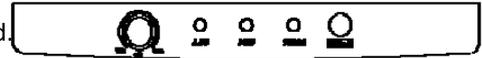

Trouble shooting

PROBLEMS	VERIFICATION	SOLUTIONS
The freezer does not operate	The power supply cord is unplugged.	Plug on the cable
	The thermostat knob is set to OFF position.	Modify the thermostat knob setting
	The household fuse or circuit breaker has blown out.	Replace the fuse
The freezer makes some unusual	Verify that the freezer is correctly leveled	Follow our advices to level your freezer
	The freezer body touches the wall	Respect the space requirement
	Gurgling noises are produced by the circulation of the refrigerant in the pipes and should not be considered like a problem.	
The doors can not close correctly	Verify that the freezer is correctly leveled	Follow our advices to level your freezer
	Food package are blocking the door	Remove the package of food and sort the food in the freezer
	The gaskets are dirty	Clean your freezer totally
	The shelve are out of position	Replace correctly the shelve

Requesting assistance or service

If the problem is not due to one of the items listed in these troubleshooting, contact your dealer or authorized Service Company. **Please never repair by yourself.**

Technical specifications

Protection class	I
Climate type	N /ST/T
Volume	235L
Rated Voltage	220-240V
Rated Frequency	50Hz
Power consumption	0.7 kWh / 24H
Frozen power	12 Kg / 24 H
Classification	****
Rate Current	0.65A
Refrigerant	 R600a 95g
Foaming Agent	Cyclopentane
Size(width/depth/height):	596x595x1744mm

Recycling

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

Net weight: 61 Kg

